

ES5200 CONTROL BOARD

Receiver "Left Unit"

MAG Lock
Relay

Alarm
Relay

Door
Relay

A Passage Complete
Relay

B Passage Complete
Relay

Calibrate LED
 • Flashing *Not Calibrated*
 • Off *Calibrating*
 • On *Calibrated*

Remote Annunciator
Input

A Test Button
 • Press to test exit input

B Test Button
 • Press to test entry input

A Input

Ground


B Input

Bypass Input

Ground

Door Input

Power
12-24"VDC"

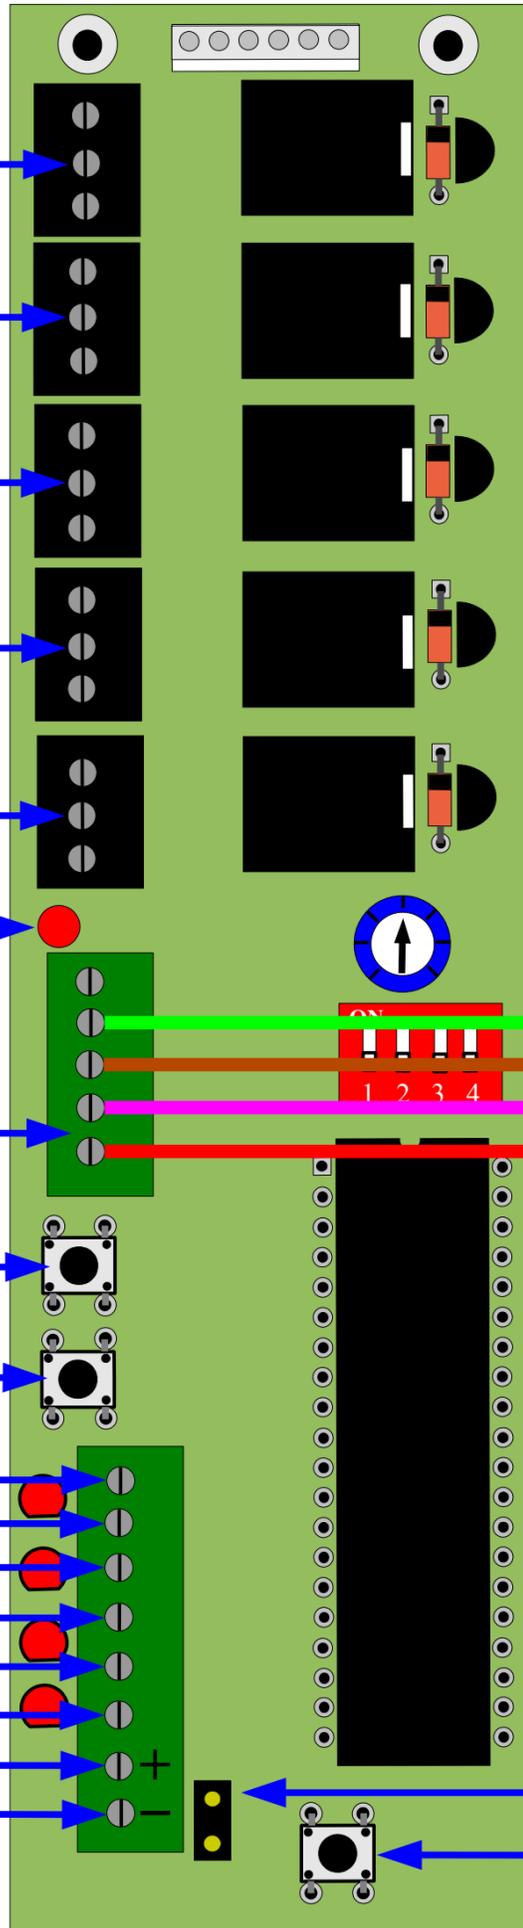


Each Remote Annunciator will provide visual and audible notification to users on the opposite side of the door the ES5200 Entry Sentry is mounted upon.

Note:

Wire Gauge:
22 AWG = *Signal wires*

R2 REMOTE ANNUNCIATOR

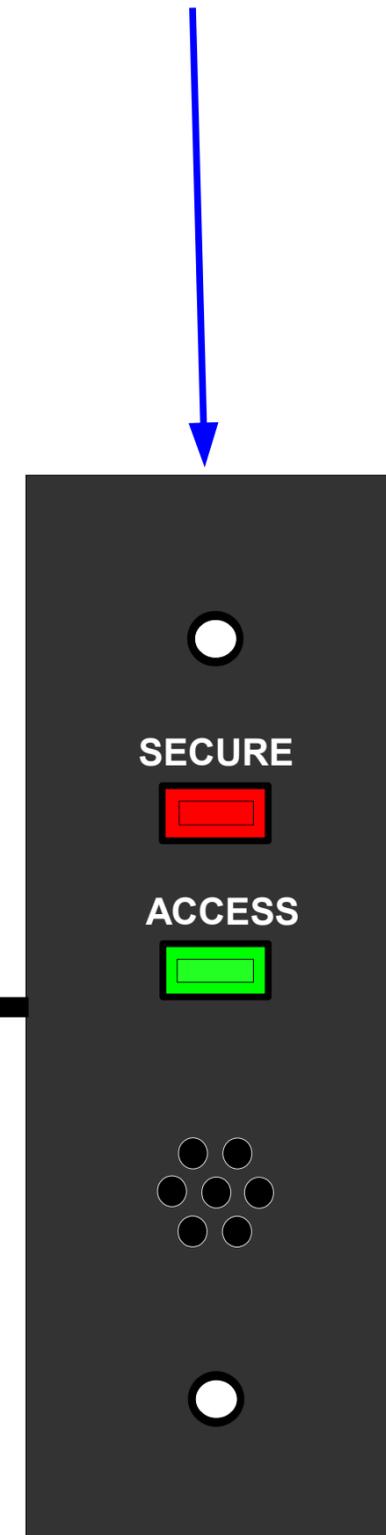

Tamper Enable
 • Remove jumper
 Calibrate Button
 • Press to calibrate

Mounting:

- Install on the Opposite side of the door
- Power is provided by the ES5200