



Detex Corporation, 302 Detex Drive, New Braunfels, Texas 78130-3045  
(830)629-2900 / 1-800-729-3839 / Fax (830)620-6711  
E-MAIL: [detex@detex.com](mailto:detex@detex.com) INTERNET: [www.detex.com](http://www.detex.com)


## INSTALLATION INSTRUCTIONS FOR 03A(N), 02A(N), 01A(N) PULLPLATE TRIM

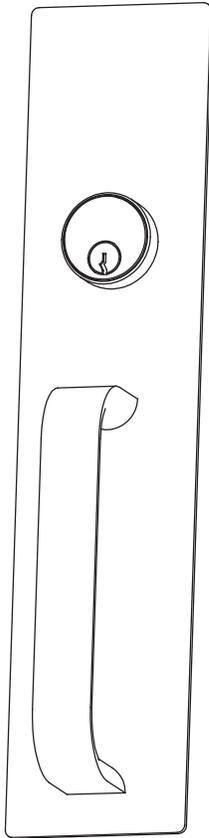





**03A(N)  
FUNCTION**

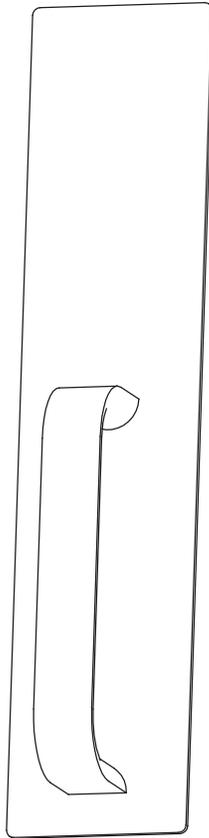

**02A(N)  
FUNCTION**

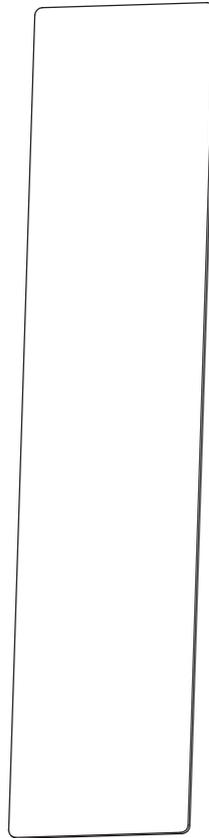

**01A(N)  
FUNCTION**

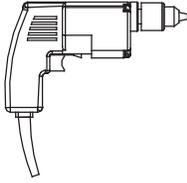
Tools Required	
Power Drill	
Pencil	
Hammer	
Safety Glasses	
Tape Measure	
Screw Driver	
Center Punch	

### 03 Trim Preparation

(No cylinder prep necessary for 02 & 01 Trims)


Cut cylinder tailpiece

1-1/16" (Min)  
1-1/8" (Max)

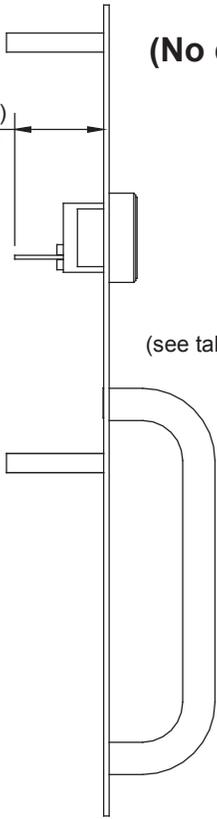

1


**Rim Cylinder Preparation**

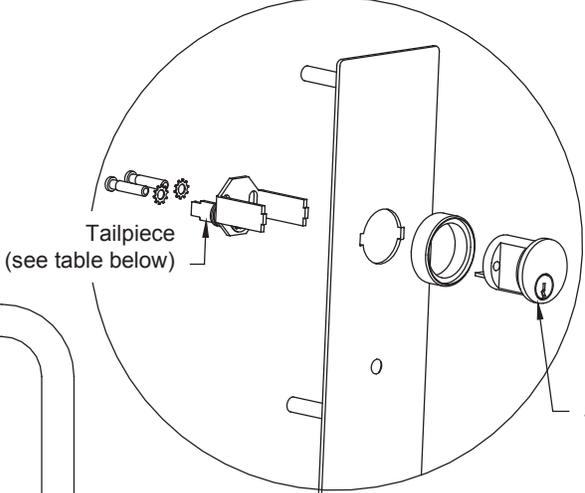

Tailpiece Used	Door Thickness
	1-3/4" and 2" Thick Doors
	2-1/4" Thick Doors

2


**Install Tailpiece Assembly**

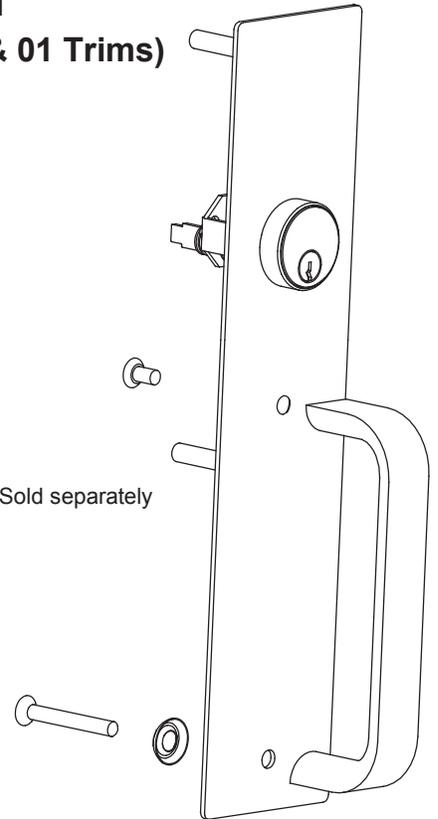



3

**Install Trim Unit on Door**  
(see next page)



# Door Preparation

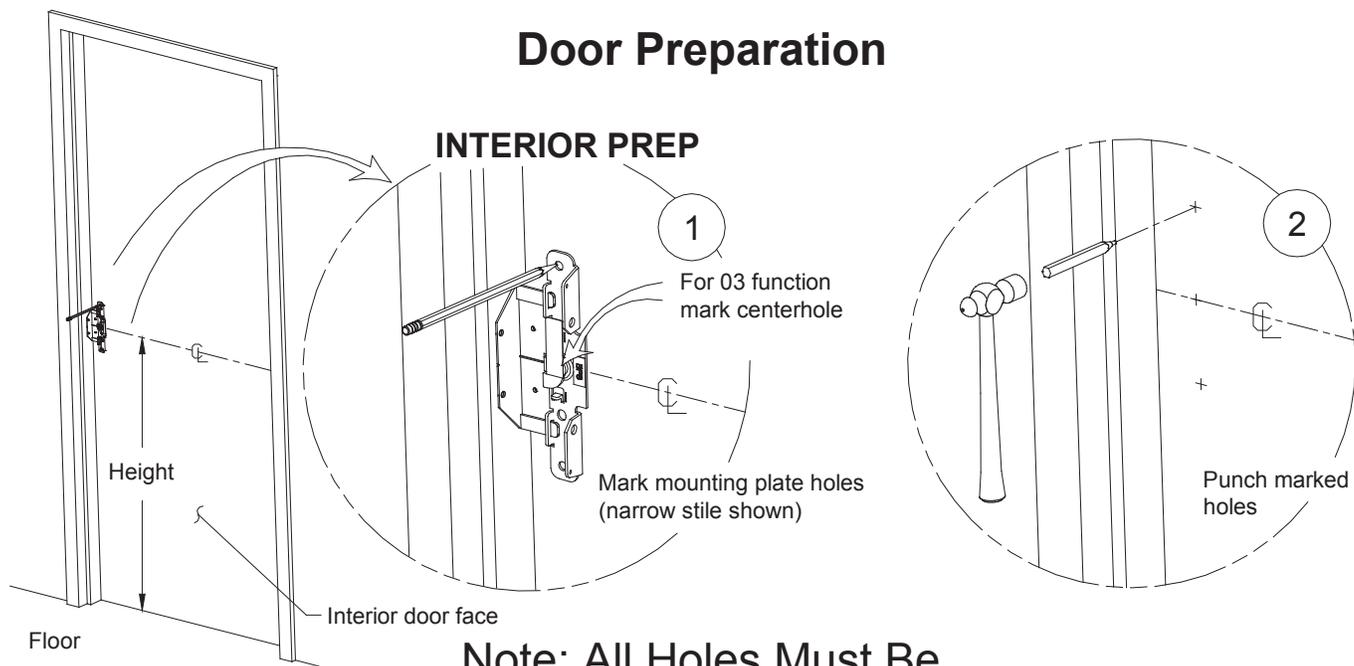


**Note: All Holes Must Be Drilled Straight and Level**

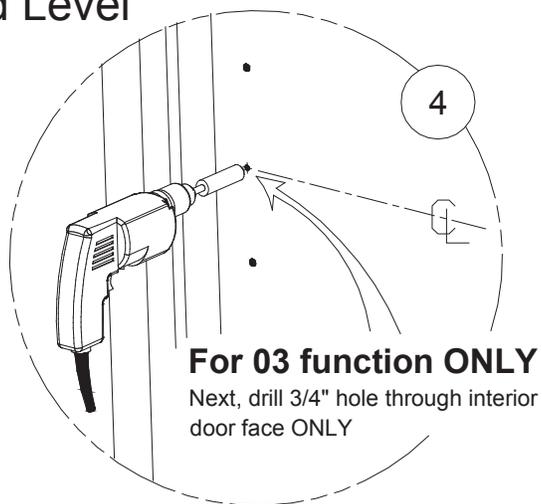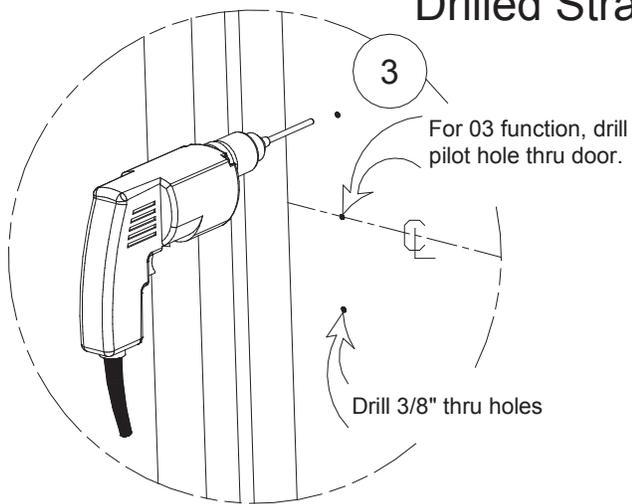


## EXTERIOR PREP

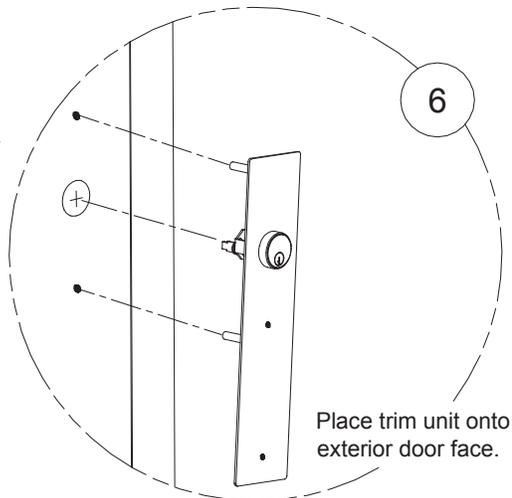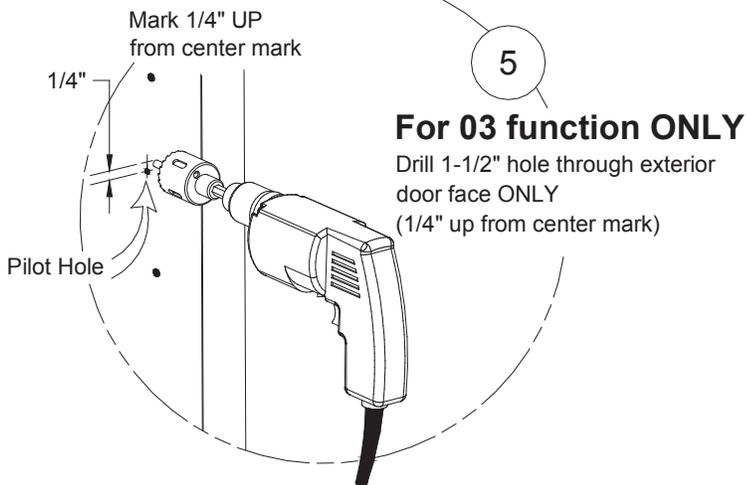


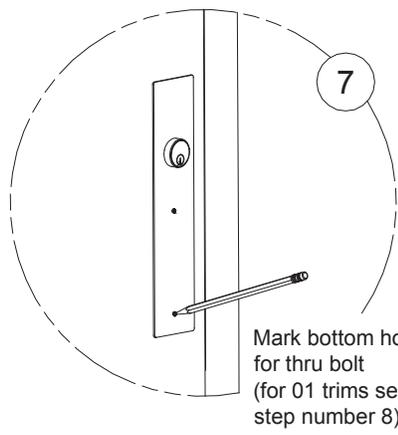

7  
Mark bottom hole for thru bolt (for O1 trims see step number 8)

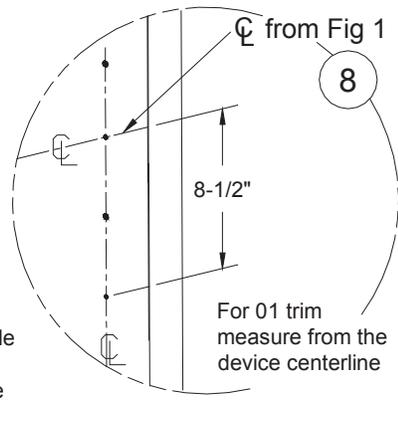


8  
C from Fig 1  
8-1/2"  
For O1 trim measure from the device centerline

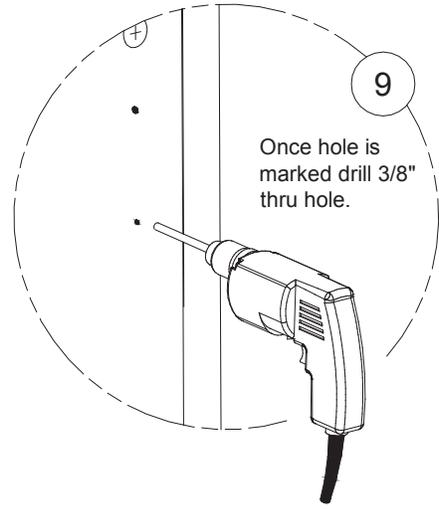


9  
Once hole is marked drill 3/8" thru hole.

## Installing the Trim

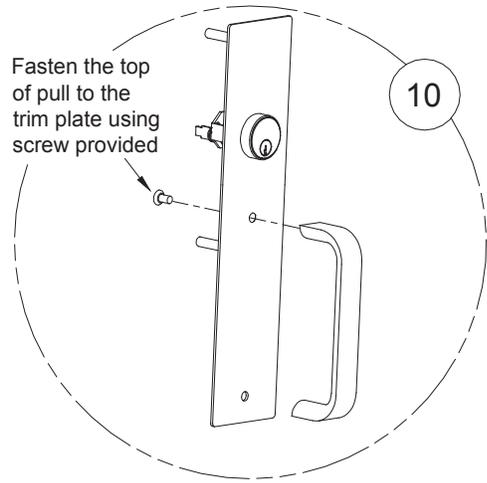

10  
Fasten the top of pull to the trim plate using screw provided

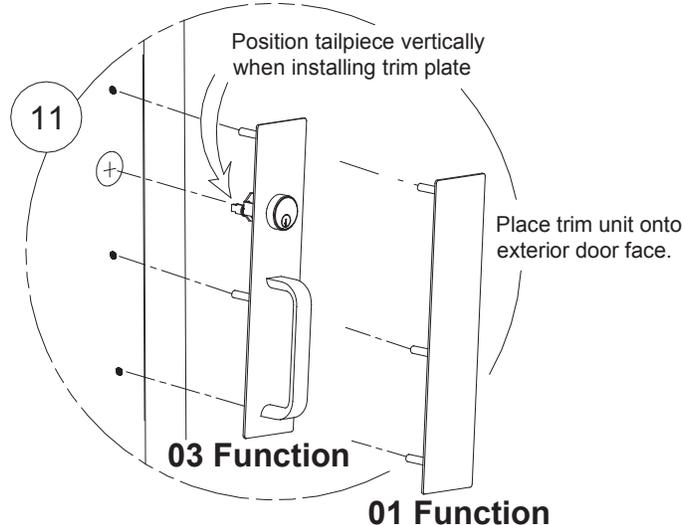


11  
Position tailpiece vertically when installing trim plate

Place trim unit onto exterior door face.

03 Function


01 Function

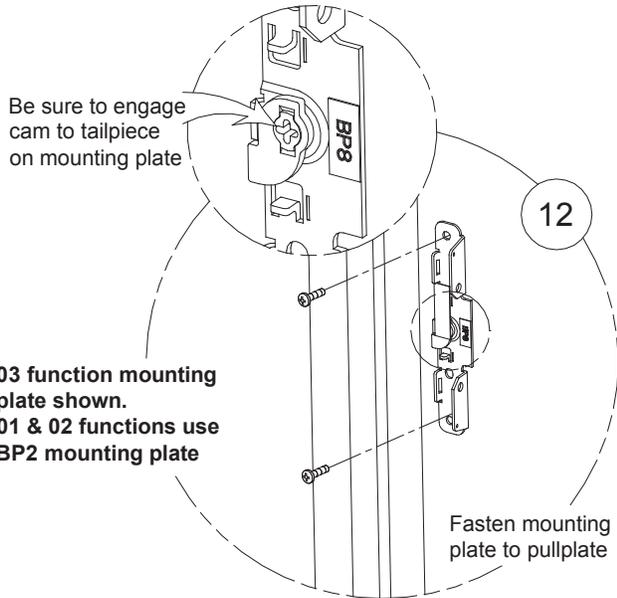

12  
Be sure to engage cam to tailpiece on mounting plate

03 function mounting plate shown. 01 & 02 functions use BP2 mounting plate

Fasten mounting plate to pullplate

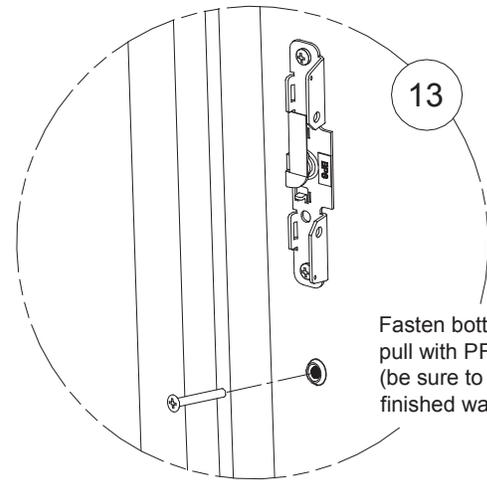

13  
Fasten bottom of pull with PFH screw (be sure to use finished washer)

Continue with Exit Hardware Instructions