



Detex Corporation, 302 Detex Drive, New Braunfels, Texas 78130-3045
 830-629-2900 / 800-729-3839 / Fax 800-653-3839 / Text photos only: 830-481-6433 / INTERNET: www.detex.com

INSTALLATION INSTRUCTIONS FOR MORTISE 02DM, 02DMT, 02DMU OUTSIDE LEVER PULL TRIM

DWG #: 101998


Table of Contents	Page
Device parts breakdown view & part numbers.....	2
Rehanding, Door Prep - Trim Side.....	3
Install Trim, Install Mortise Lock.....	3


TOOLS AND SUPPLIES

- Safety Glasses
 (Always put on safety glasses prior to beginning installation of unit)
- Pencil
- Center Punch
- Hammer
- Drill Motor
- Drill Bits & Taps
- Screw Driver (Phillips Drive)
- Tape Measure

For WARRANTY information,
 scan code below or
 go to www.detex.com/warranty


For device installation videos,
 scan code below or
 go to www.detex.com/videos



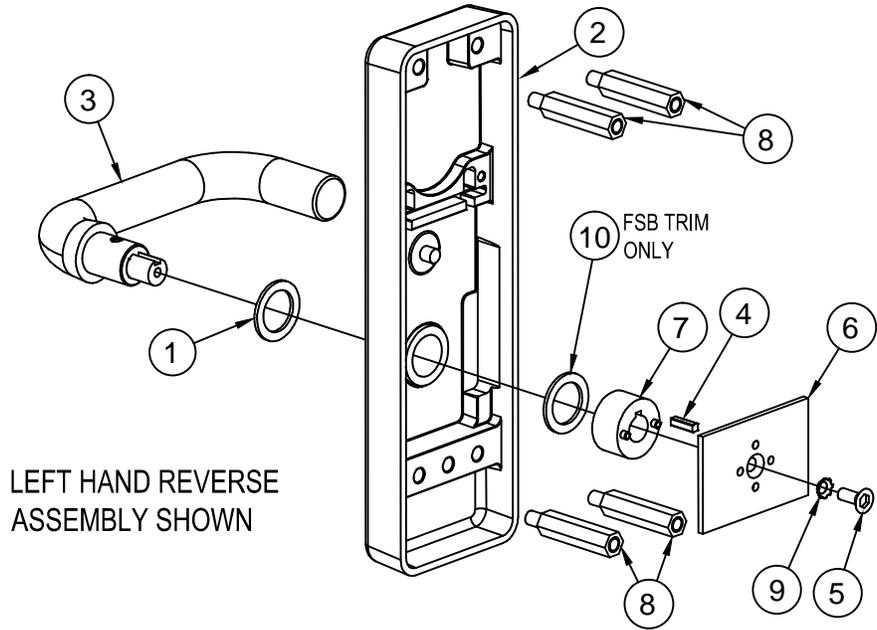

QTY	PART NO.	ITEM	DESCRIPTION
1	100851	1	WASHER, FLAT
1	101459-X	2	ESCUTCHEON ASSY, 14 WIDE, BP-1
	101502-X		ESCUTCHEON ASSY, 14 WIDE, BP-3
	101503-X		ESCUTCHEON ASSY, 14 WIDE, BP-5
1	101376-7	3	LEVER ASSEMBLY, S
1	100774	4	KEY, SHEAR PIN
1	100822-1	5	SCREW, 10-24 x 1/2 FH SOCKET CAP
1	101989	6	BLOCKING PLATE, 02 LEVER TRIM
1	101992	7	ASSEMBLY, TORQUE COLLAR
4	100777	8	STANDOFF, HEX, 1/4-20
1	CK-110-1	9	LOCKWASHER, C'SUNK, EXT. TOOTH
1	105964	10	WAVE WASHER (FSB)

Mortise lock NOT supplied with TRIM.
 For a retrofit application, remove lock and exit device before installing new trim.

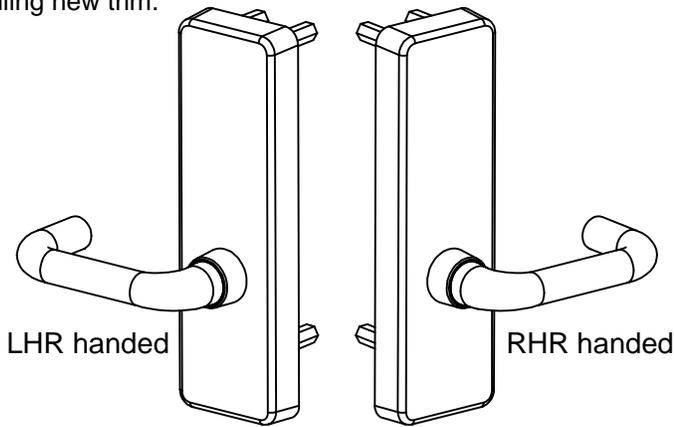


Change Handing (if required)
 (Place trim on a clean surface with this view facing up)

Use 1/8" Allen wrench to remove screw & lockwasher.

Pull back blocking plate.
Caution: Do not lose the brass shear pin located inside assembly.

Turn handle and plate 180°. Replace plate and tighten Allen screw & lockwasher.

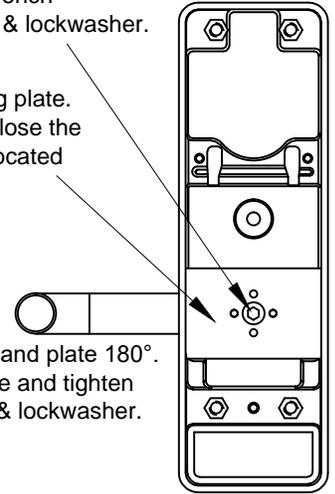


STEP 1: PREP DOOR

MARK & DRILL HOLES - TRIM SIDE:


Use plastic template to mark TRIM holes (LHR shown)

NOTE: The height from the finished floor to the trim/device centerline that Detex recommends is 40".

If unsure of trim/device centerline location, use the method below and at right to determine correct trim location.

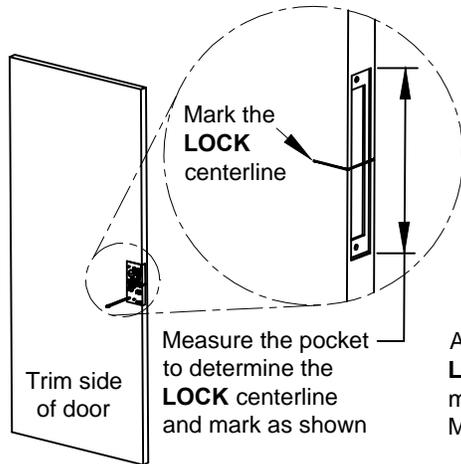

MARK HOLES:

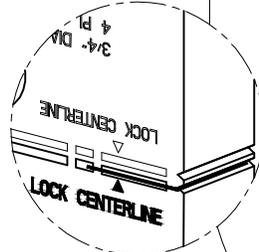

Align the plastic template LOCK CENTERLINE with the mark previously made as shown. Mark the four A locations.

