


INSTALLATION INSTRUCTIONS FOR DETEX VALUE SERIES® NARROW TRIM TEMPLATES ARE AVAILABLE ON WEBSITE

102995 MAY 5, 2015

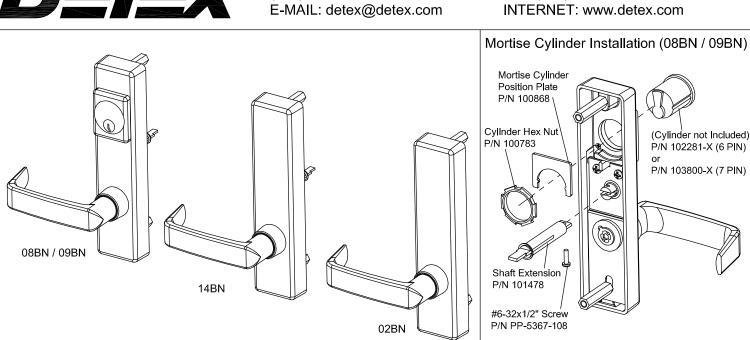


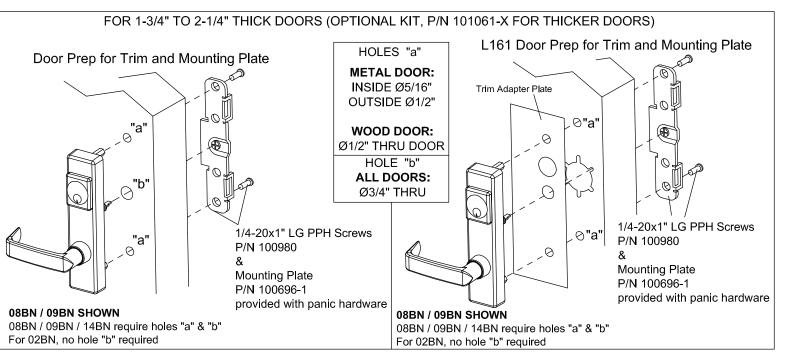

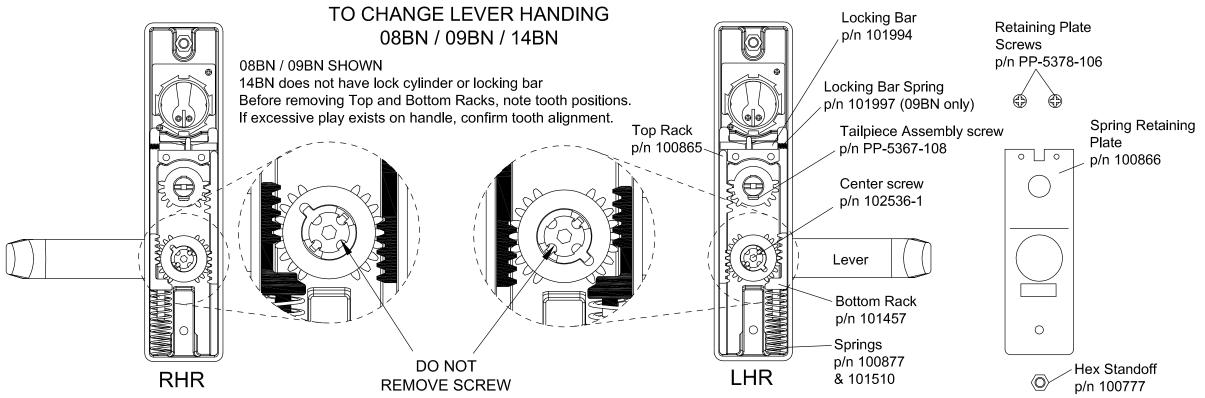

- A. Remove tailpiece assembly screw. (remove assembly if necessary)
- B. Remove hex standoff and two (2) screws holding spring retaining plate. WARNING: Springs under pressure! Protective eyewear required.
- C. Remove Spring Retaining Plate.
- D. (09 Function only) Move Lock Bar spring to opposite side.
- E. Carefully remove springs and bottom rack.
- F. Remove top rack.

- G. Rotate lever to opposite side.
- H. Engage bottom rack on the opposite side as shown.
- I. Engage top rack on the opposite side as shown.
- J. Install springs on bottom rack. WARNING: Springs under pressure!
- K. Replace Spring Retaining Plate, hex standoff and screws.
- L. Replace tailpiece assembly screw. Handing Complete

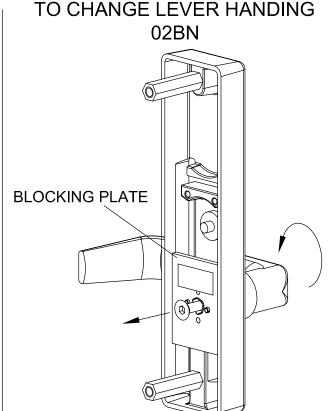

- A. Use 1/8" allen wrench to remove screw.
- B. Pull back on BLOCKING PLATE. CAUTION: Do not lose the brass shear pin located behind plate.
- C. Turn handle 180°, align holes in plate with pins on inside collar.
- D. Reinstall screw & lockwasher. **Handing Complete**