



Detex Corporation, 302 Detex Drive, New Braunfels, Texas 78130-3045
830-629-2900 / 800-729-3839 / Fax 800-653-3839 / Text photos only: 830-481-6433 / INTERNET: www.detex.com

ELECTRICAL INSTRUCTIONS FOR DETEX VALUE SERIES® EE DELAYED EGRESS AND "H" MODELS (HURRICANE)

VALUE SERIES® EE

RIM, SVR

Dwg #: 101980 (RIM)
103560 (SVR)



Table of Contents	Page
Device parts breakdown view & part numbers.....	2
Mortise cylinder installation, device clearance check.....	3
EE Electrical Option.....	4-5
Riser Diagram.....	6
Flex Conduit / Hardwire Transfer.....	7
Delayed Egress Operations.....	8
Troubleshooting.....	9

FOR SPECIAL LOCKING ARRANGEMENT:

THIS PRODUCT MUST BE CONNECTED INTO A FIRE ALARM SYSTEM PER NFPA CODE OR OTHER REGULATIONS SO THAT, IN THE EVENT OF FIRE, THE TIME DELAY WILL BE BYPASSED. CONTACT YOUR LOCAL CODE AUTHORITY TO VERIFY COMPLIANCE WITH FIRE AND BUILDING CODES. THE DELAYED EGRESS DEVICE SHOULD BE ROUTINELY CHECKED FOR PROPER OPERATION AND COMPLIANCE WITH FIRE AND BUILDING CODES.

Should you have a Question/Problem with your Detex device please call Detex Technical Support from the job site at 1-800-729-3839 and choose option 2 on our menu. Please do not return the product to the distributor.


For **WARRANTY** information,
scan code below or
go to www.detex.com/warranty



Owner's Copy

For device installation videos,
scan code below or
go to www.detex.com/videos



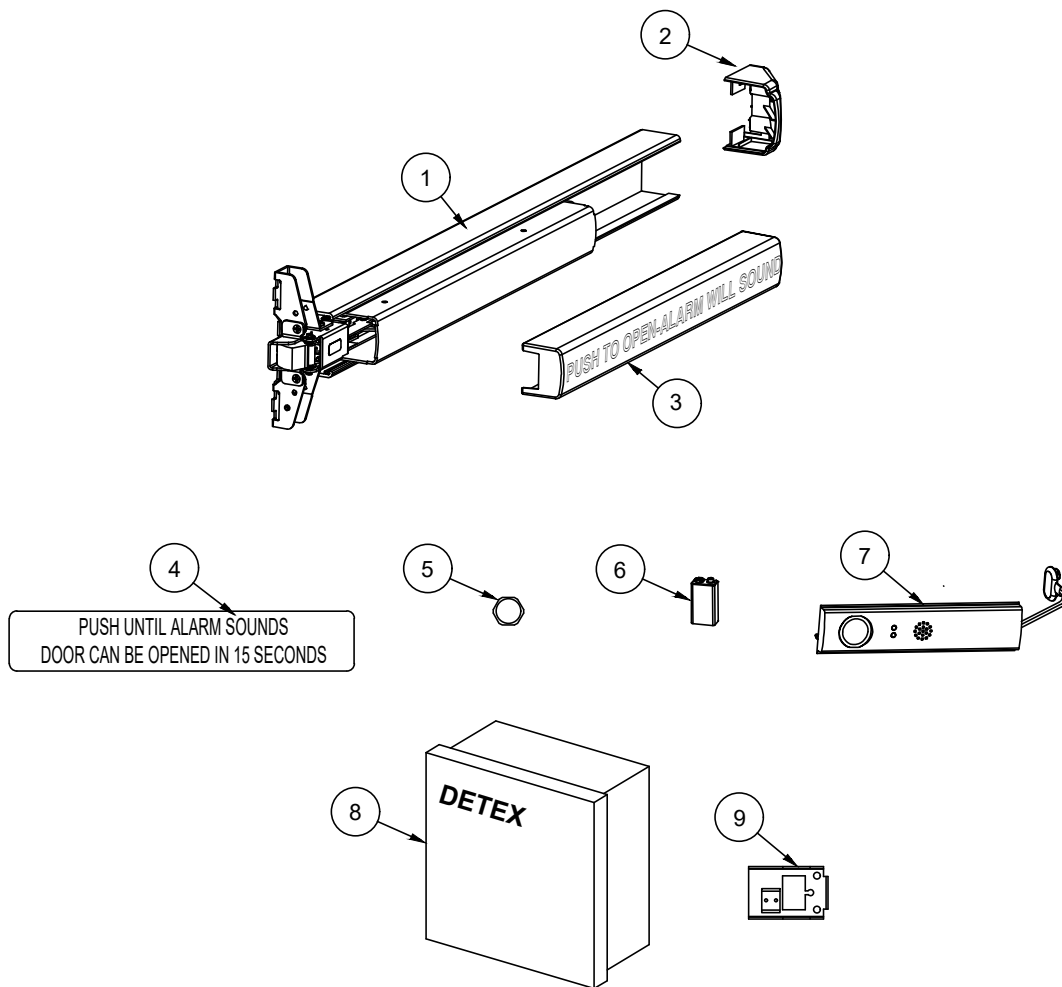

PARTS BREAKDOWN		
Item	Order Part #	Description
1	106900-11	Centercase/Pushpad SubAssembly, S&R V40, EE, 36"
	106900-13	Centercase/Pushpad SubAssembly, S&R V40, EE, 48"
	106900-14	Centercase/Pushpad SubAssembly, S&R V50/51, EE, 36"
	106900-15	Centercase/Pushpad SubAssembly, S&R V50/51, EE, 48"
2	101822	Endcap, Value Series
3	101810-1	Pushpad Wrap, 3-0
	101815-1	Pushpad Wrap, 4-0
4	ECL-395	Door Sign, 15 second delayed egress
	ECL-395-1	Door Sign, 30 second delayed egress
5	100783	Hex Nut (for cylinder installation)
6	PP-5567	9V Battery
7	105032-3	Value Series, Rim, EE fillerplate, 3 ft, 15/15
	105032-4	Value Series, Rim, EE fillerplate, 4 ft, 15/15
	105032-15	Value Series, Rim, EE fillerplate, 3 ft, 1/15 SA
	105032-16	Value Series, Rim, EE fillerplate, 4 ft, 1/15 SA
	105031-3	Value Series, SVR, EE fillerplate, 3 ft, 15/15
	105031-4	Value Series, SVR, EE fillerplate, 4 ft, 15/15
	105031-15	Value Series, SVR, EE fillerplate, 3 ft, 1/15 SA
	105031-16	Value Series, SVR, EE fillerplate, 4 ft, 1/15 SA
8	90-800	90-800 Power Supply
9	101844	Endcap Bracket

Your particular part or configuration may not be shown:
Contact Detex technical support at 800-729-3839 (option 2)


MORTISE CYLINDER INSTALLATION

PRECAUTIONARY NOTE:


1. See "EE ELECTRICAL OPTIONS" before reinstalling filler plate.
2. Be careful when installing fillerplate assembly not to damage wires.

1


Remove endcap, endcap bracket & fillerplate subassembly.

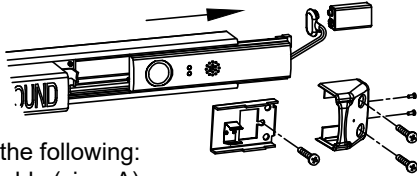


Disconnect the following:
 Cable assembly (view A),
 12 pin connector (view B),
 Magnet connection (view C),
 Surface Vertical Rod (SVR) connector (view D if applicable)
 Battery connection

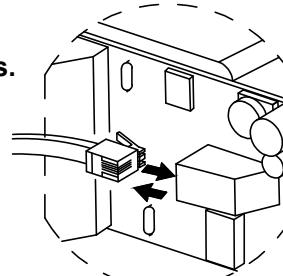


View A

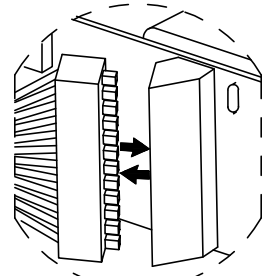

View B

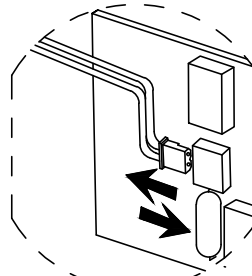

View C

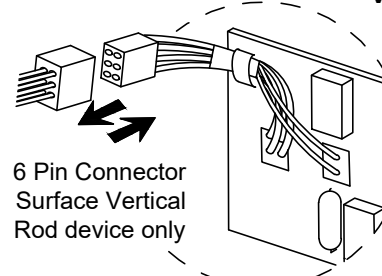

View D

6 Pin Connector
 Surface Vertical
 Rod device only

(note: board layout may differ slightly from layout shown)


2

INSTALLING MORTISE CYLINDER

NOTE:

- (1) Move placement of spacers to match length of cylinder used to allow smooth rotation of cam.
- (2) All cylinder spacers must be used, either on top or bottom

See View A, B, C & D above

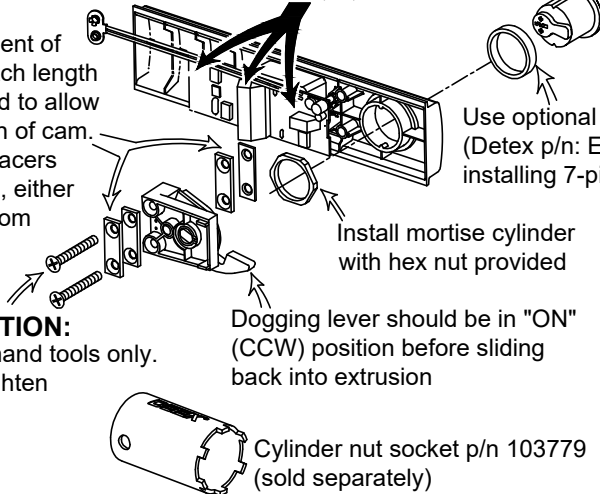


Use optional cylinder collar
 (Detex p/n: ECL-1595) when
 installing 7-pin mortise cylinder

Install mortise cylinder
 with hex nut provided

Dogging lever should be in "ON"
 (CCW) position before sliding
 back into extrusion

CAUTION:
 Tighten with hand tools only.
 Do not overtighten


Cylinder nut socket p/n 103779
 (sold separately)

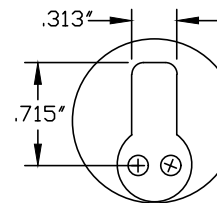

Mortise Cylinder with standard
 Yale cam required

3

RE-INSTALL FILLERPLATE

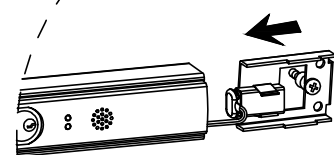

Re-connect in the following order:


- 1) Cable assembly (view A),
 - 2) Battery,
 - 3) 12 pin connector (view B),
 - 4) 2 pin connector (view C),
 - 5) SVR connector (view D if applicable).
- Install fillerplate subassembly & endcap bracket.

CHECKING FOR DEVICE CLEARANCE

(Cut-Off procedure if required)

1

Slide endcap assembly
 onto extrusion

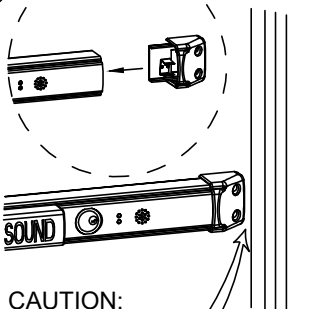

CAUTION:
 Check device and door frame clearance.

Minimum
 Fillerplate
 Length

Type	Length (L)
EE	9-3/8"


www.detex.com/cutdown

2

Cut fillerplate and extrusion
 STRAIGHT & SQUARE
 to desired length and deburr

Secure with tape
 before cutting

Protect wires
 during cutting

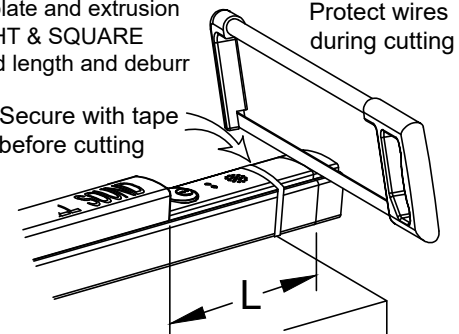

EE ELECTRICAL OPTION


REQUIRES DETEX POWER SUPPLY

REQUIRED WIRE SIZES:

STRANDED WIRE GAUGE: 18 AWG MIN

MAXIMUM LENGTH OF TWO CONDUCTOR CABLE: 40 FEET

90-800 Power Supply with Detex Delayed Egress device

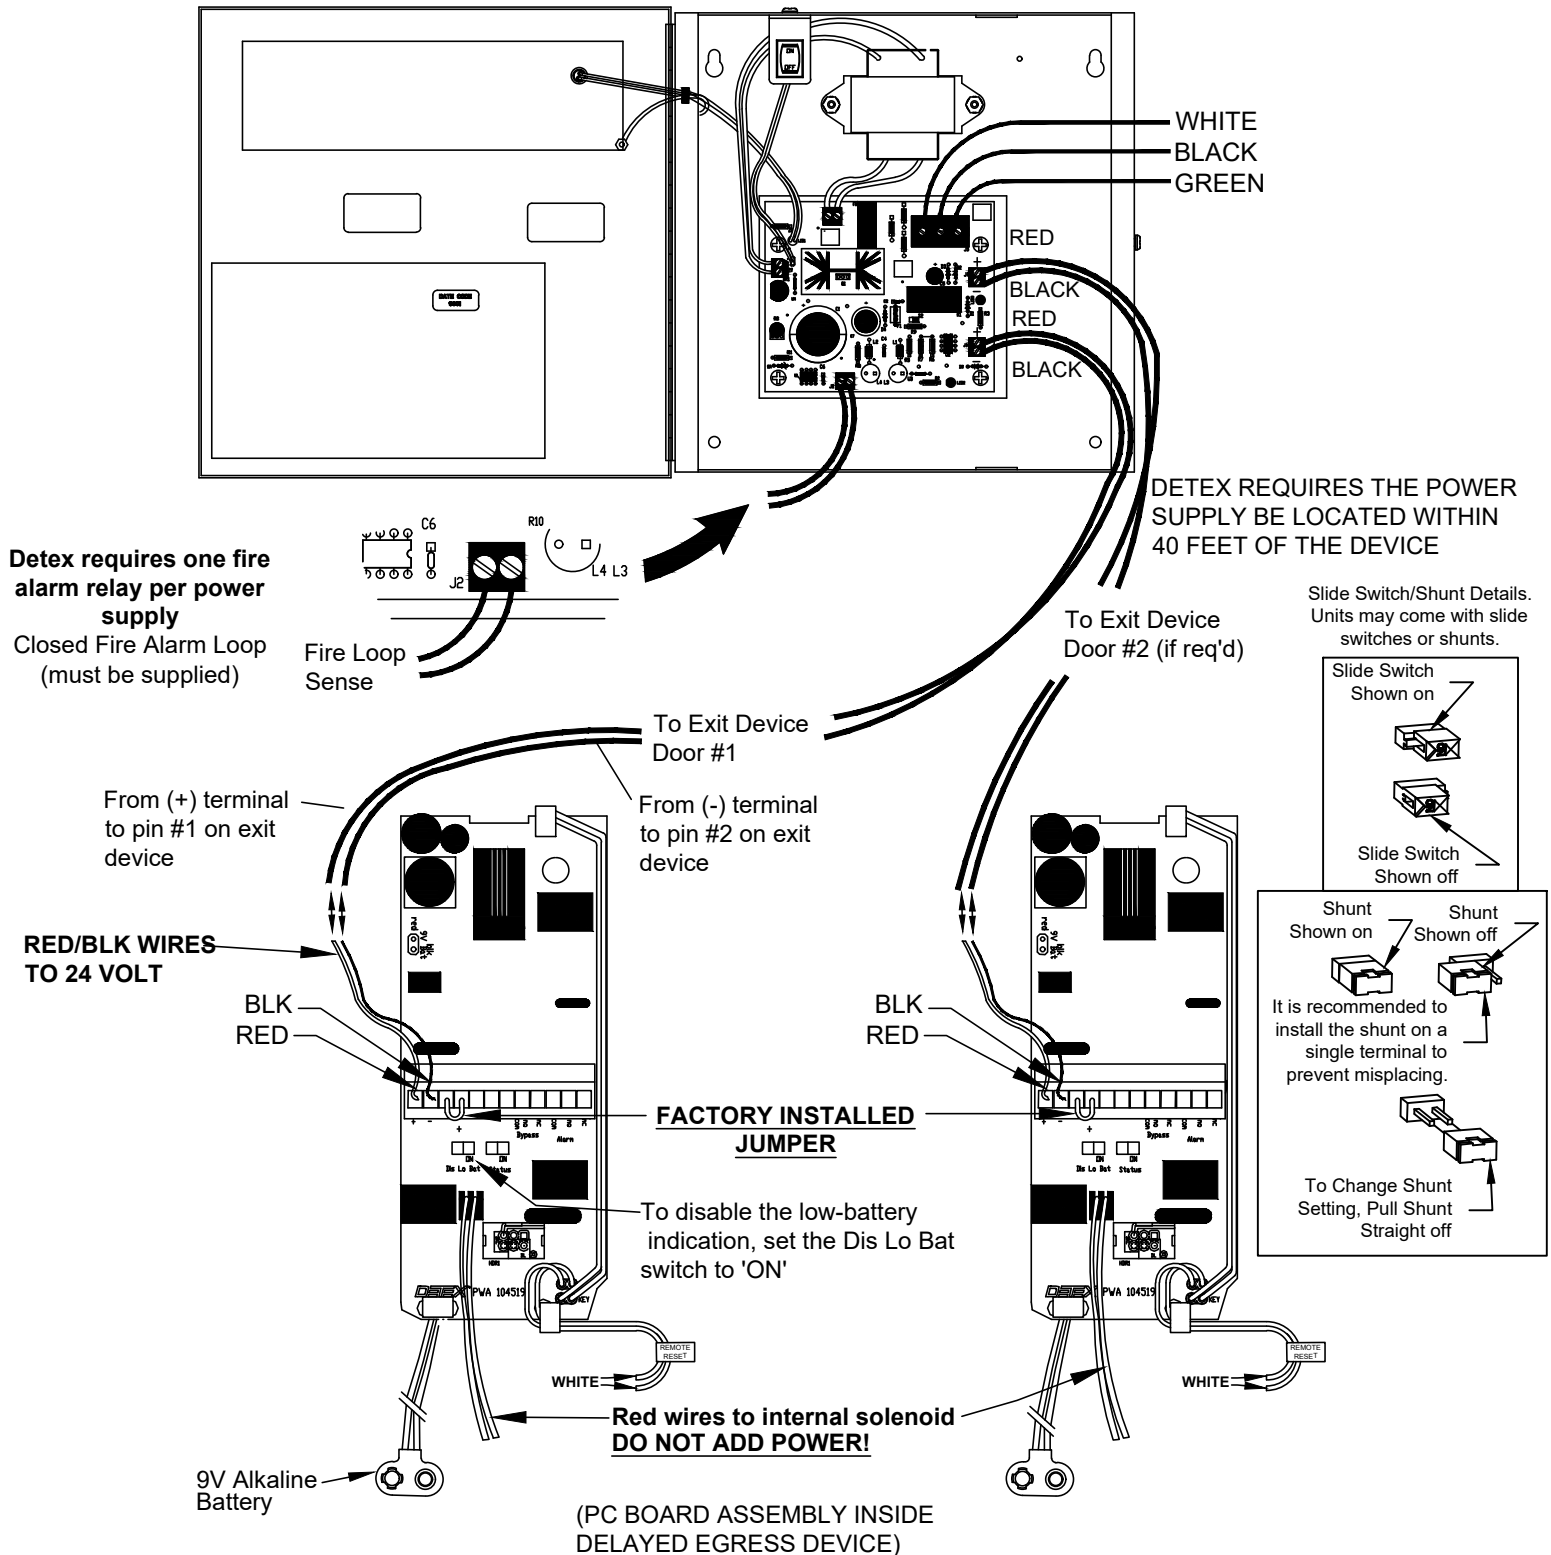


EE ELECTRICAL OPTIONS

L9 = Less 9v battery

SI = Status indicator

SA= Silent Arming

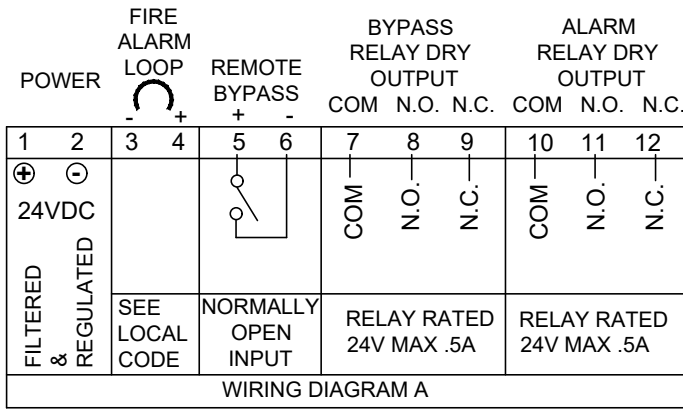

POWER REQUIREMENT: .5 AMPS @ 24 VDC

The key cylinder arming switch must be set to "OFF". To prevent the alarm from sounding during installation, attach battery AFTER main power is applied.

Delayed Egress Device requires a connection to the Fire Alarm System. The fire alarm connection needs to be made **Externally** at the Power Supply. During a fire alarm condition the delayed egress will be by-passed.

MAIN POWER CONNECTION: (1 & 2)

See Power Supply instructions

DETEX REQUIRES USING THE FIRE ALARM CONNECTION IN THE POWER SUPPLY:

CLOSED connection is provided to the fire alarm system when not in-alarm and OPEN when in-alarm. See power supply instructions for details.

REMOTE BY-PASS: (5 & 6)

Connect normally open (N.O.) contact. When the contact is closed momentarily, this will allow the door to open without the alarm sounding. The unit will re-arm in 15 seconds after the **door is closed**.

BY-PASS RELAY: (7,8 & 9) DRY contact output.

The BY-PASS relay is energized when the unit is disarmed by the KEY or REMOTE BY-PASS to indicate to a remote indicator that the door is not armed.

ALARM RELAY: (10, 11 & 12) DRY contact output.

The ALARM relay is energized when the unit is sounding its alarm to indicate to a remote indicator that an unauthorized exit has been attempted.

OUTSIDE KEY CONTROL

If the OKC option is used, the outside key bypasses and rearms the alarm.

STATUS INDICATOR (SLIDE/SHUNT SWITCH)

ON: Green LED blinks every three seconds when the unit is disarmed.


Red LED blinks every three seconds when the unit is armed.

OFF: No status indication


REMOTE RESET (WHITE WIRES):

Connect normally open (N.O.) contact.

When the contact is closed momentarily, this will allow alarm reset or the door to open without alarm sounding. The unit will arm in 15 seconds (default) after the door is closed.

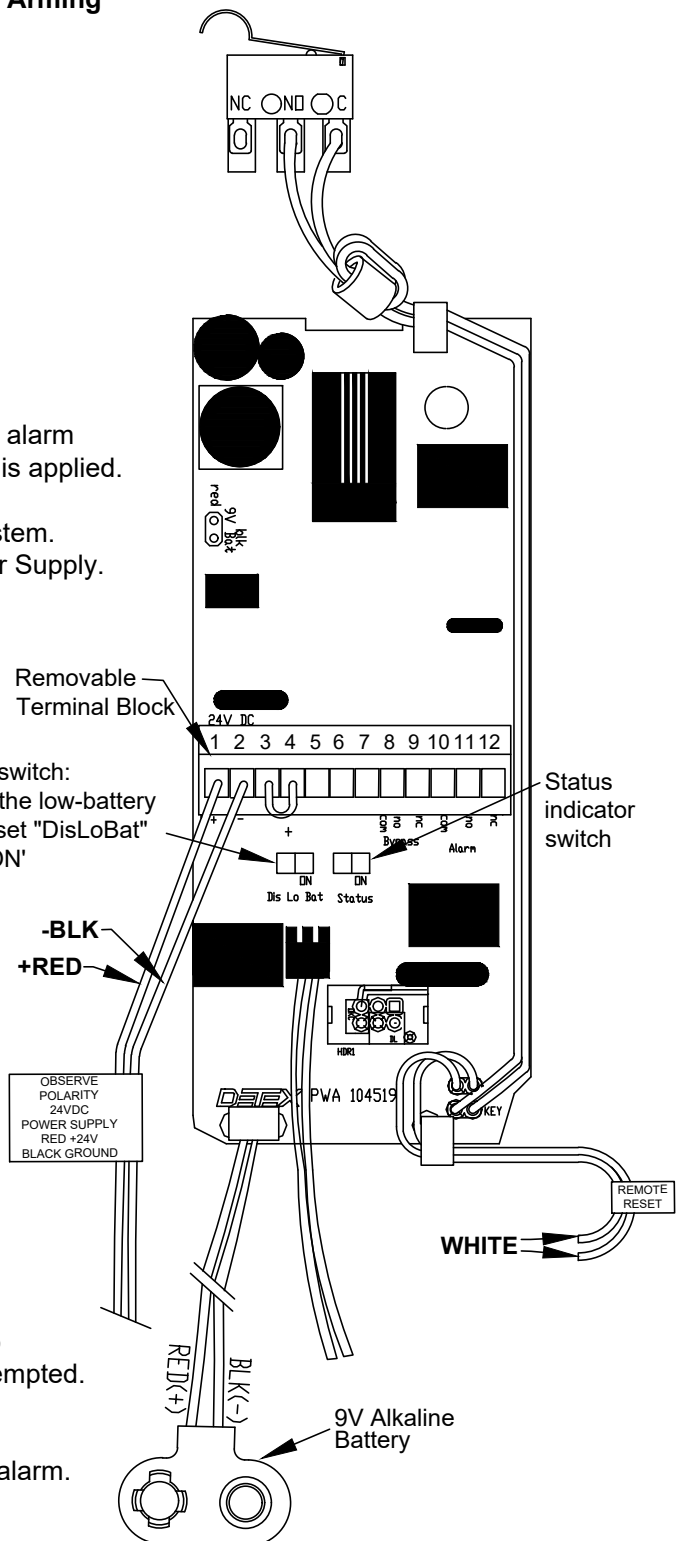


RISER DIAGRAM

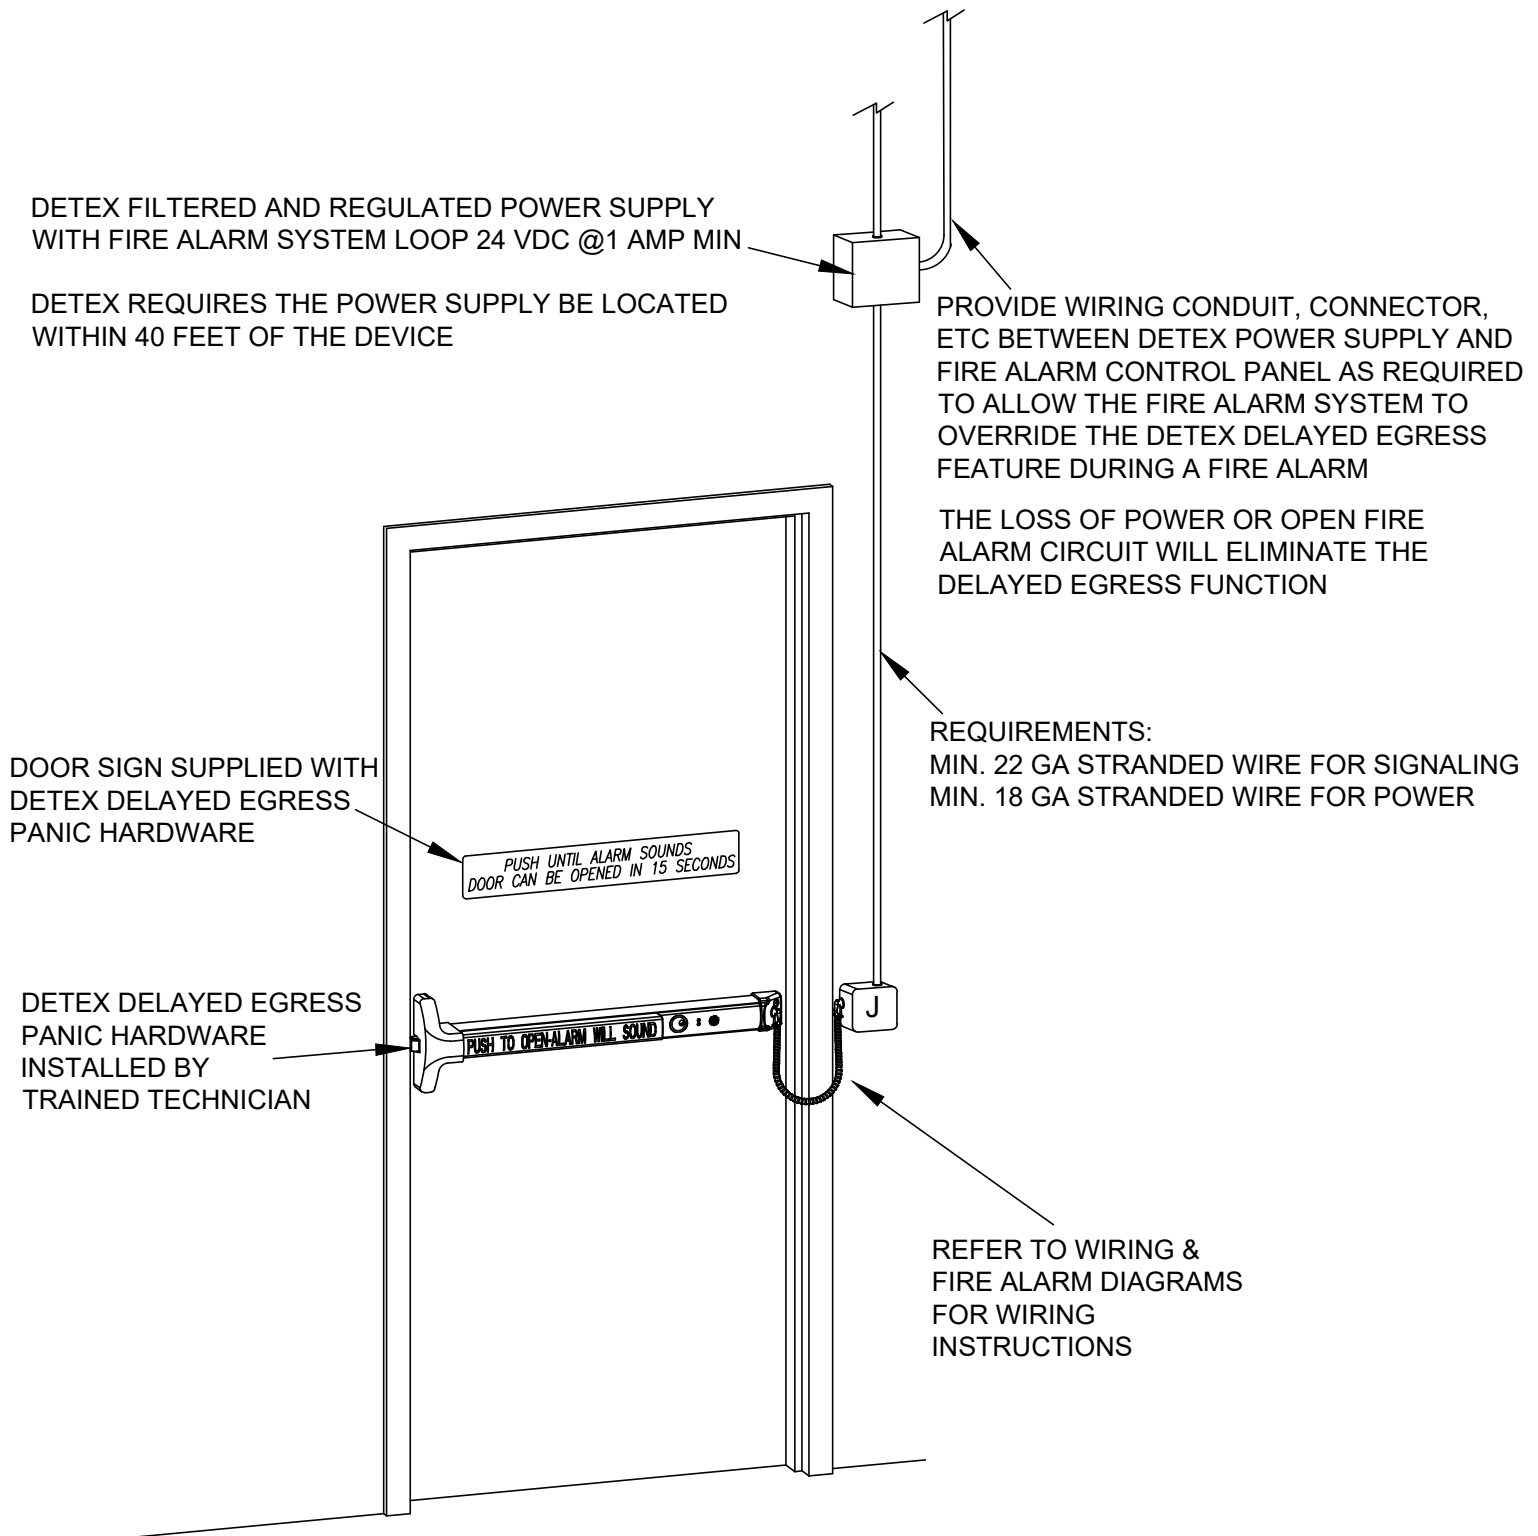


Value Series Flex Conduit/End Cap Kit

p/n: FC3

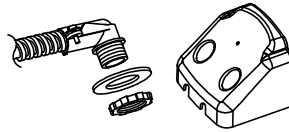


VALUE SERIES FLEX CONDUIT INSTALLATION

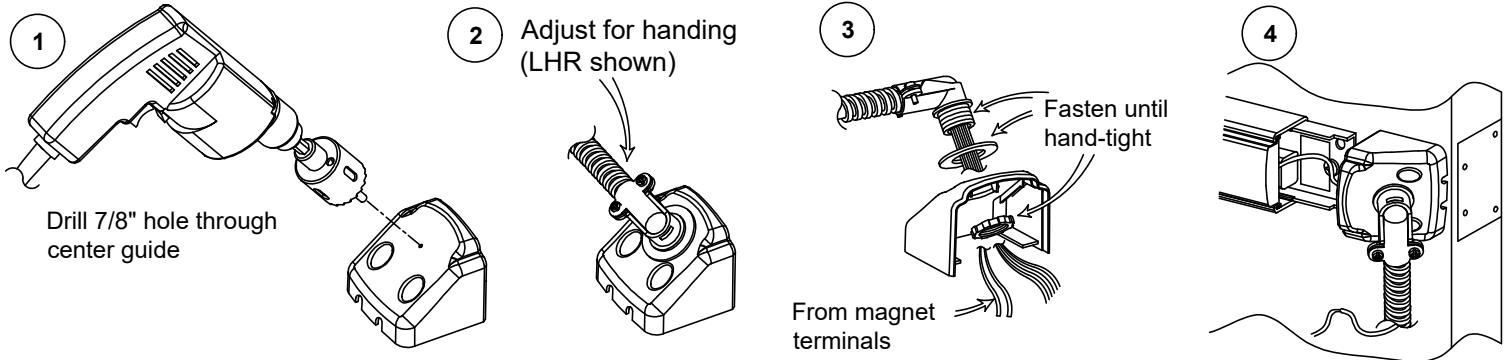


Note: For high traffic areas an electric through-wire hinge or power transfer is recommended.

OPTIONAL HARDWIRE TRANSFER KITS

Electric Hinge

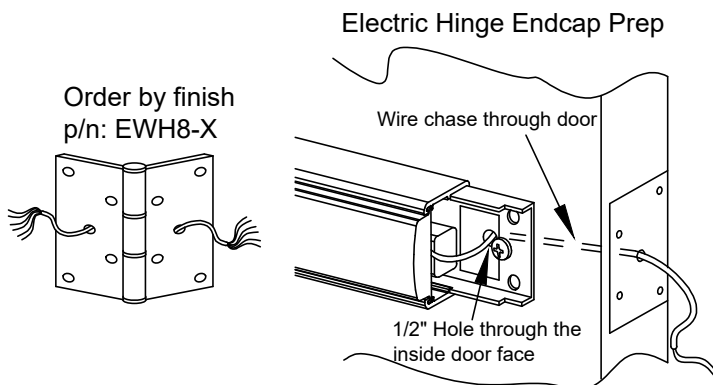


Power Transfer

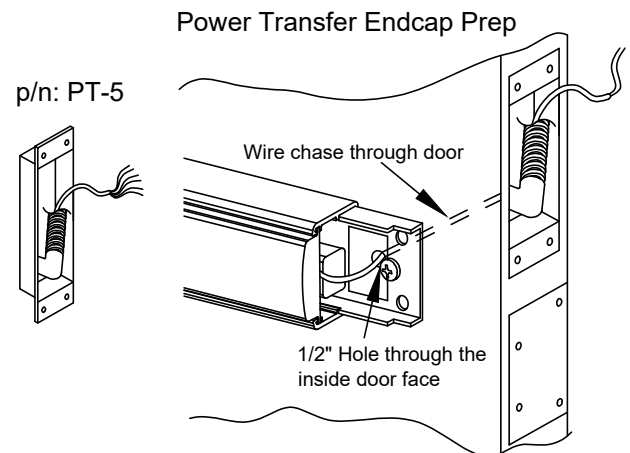


Note: For high traffic areas an electric through-wire hinge or power transfer is recommended.

DELAYED EGRESS OPERATIONS

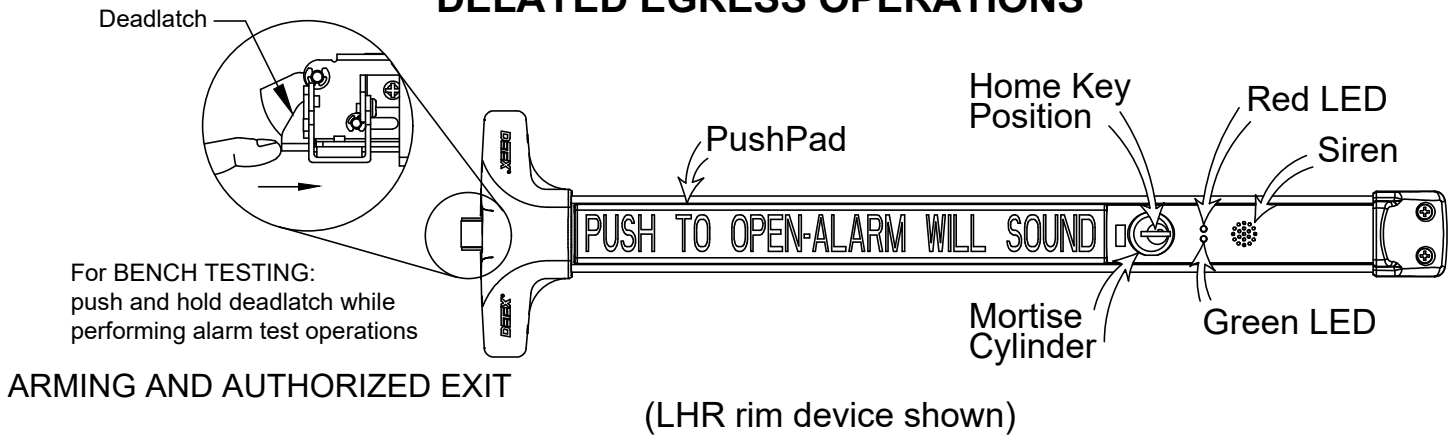

With door closed, insert key in the cylinder, turn CCW then back to the home key position and remove it. The red LED blinks twice then the green LED glows continuously. Authorized personnel can exit the door during this rearm cycle. After a 1, 5 or 15 second arming period, the alarm issues three quick beeps and the green LED goes off, indicating that the unit is armed.

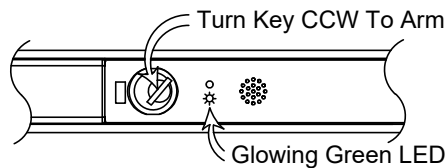

DISARMING

Insert key, turn CW to a stop. Green LED will blink twice to indicate the unit is disarmed.

EXITING UNDER ALARM


To exit, push and maintain pressure on the pushpad. After a one-second delay, (nuisance delay), LED flashes RED and alarm pulses on and off for 15 seconds. After 15 seconds, alarm issues short and long pulses to indicate that you can exit by depressing the pushpad. Alarm sounds continuously and LED is steady RED. Turn key CW to stop alarm. Egress is immediate when powered only by battery.

BATTERY BACKUP FOR ALARM

A 9-volt battery is included as a backup power source for the alarm siren if power is lost.

NUISANCE DELAY

When pushpad is depressed for less than 1 second, alarm will emit a single pulse but will not start delay function.

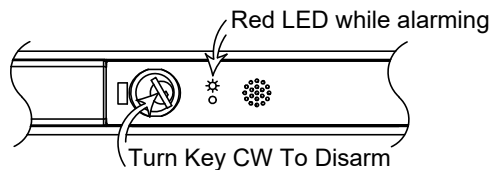

NORMAL OPERATION

LED COLOR		SIREN SOUNDS	FUNCTION
RED	GREEN		
OFF	ON	THREE CHIRPS	Indicates the unit is in process of arming. The siren will chirp three times to indicate the unit is armed and green LED will turn off
OFF	OFF		This indicates either armed or disarmed
ON	ON		Factory installed jumper removed from 3 & 4 terminals
SLOW BLINKING	OFF	SLOW PULSE	Pushpad is depressed, delay to open started
FAST BLINKING	OFF	FAST PULSE	Delay to open expired
ON	OFF	ON	Delay to open expired, door has been opened
DOUBLE BLINK	OFF	DOUBLE CHIRP	Low Battery - every 45 seconds
BLINK	OFF		Armed - status ON
OFF	BLINK		Disarmed - status ON

LOW BATTERY INDICATION

If battery voltage is low(7 volts or less), unit remains armed but LED flashes RED and unit beeps twice every 45 seconds.

Replace battery as soon as possible. To disable low battery indication, set the DisLoBat switch to 'ON'. See page 5 for location.

TROUBLESHOOTING

Problem	Probable Cause
Alarm sounds when power is applied:	Turn key clockwise to OFF position.
No green light when key is turned CCW:	<p>Confirm strike is pushing in dead latch. Door must be closed. See top of page 8.</p> <p>Confirm 24VDC power on the delayed egress device main board terminals 1(+) & 2(-).</p> <p>Confirm closed fire loop connection on power supply.</p> <p>Confirm cable is plugged in properly.</p> <p>Confirm the mortise cylinder is functioning correctly.</p> <p>Confirm the 2 pin connector on the latch end coming from the pushpad switch is plugged in properly.</p>
No delayed egress:	<p>Confirm closed fire loop connection on power supply.</p> <p>Confirm the 2-pin header with the two red wires are plugged into the delayed egress main board.</p> <p>Confirm 24VDC power on the delayed egress device main board terminals 1&2.</p>
Both red and green lights on:	Factory installed jumper removed from terminals 3 and 4.
Low battery signal- Two chirps every 45 seconds:	Check battery. If no battery is needed, set DisLoBat switch on delayed egress main board to 'ON'. See electrical pages of instructions.

Technical Support 1-800-729-3839